


luxury

ceramic basin and mixer included

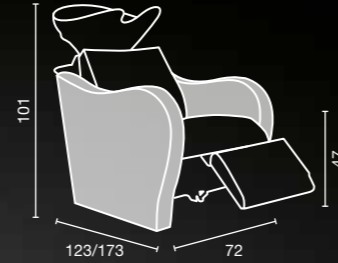

sky colours A○B●



97 X 122 X 5 CM

	footrest	footrest massage		
	WU/018/B	WU/016/B	WU/015/B	
	WU/018/N	WU/016/N	WU/015/N	
			SEPARÈ ACC/120	LINK ACC/110

Sky in photo:
A: bordeaux H8
B: milk 61


SKY COLOURS

Available in
50 SKY Colours


Sky in photo:
A: black coffee 59
B: milk 61

SKY COLOURS

Available in
50 SKY Colours

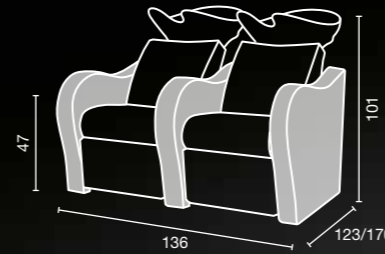

sky colours A○B●

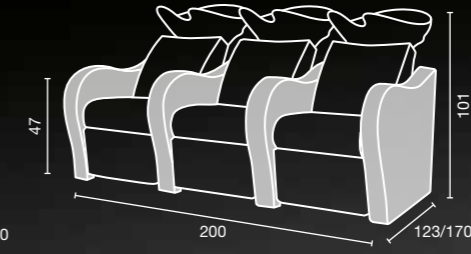

luxury sofa

ceramic basin and mixer included



	2 - PLACE	footrest	footrest massage	3 - PLACE	footrest	footrest massage
	WU/128/B	WU/121/B	WU/120/B	WU/138/B	WU/131/B	WU/130/B
	WU/128/N	WU/121/N	WU/120/N	WU/138/N	WU/131/N	WU/130/N

chairs

mirrors

cabinets

WASHING AREA

desks

waiting area

barber

accessories

chairs

mirrors

cabinets


WASHING AREA

desks

waiting area

barber

accessories

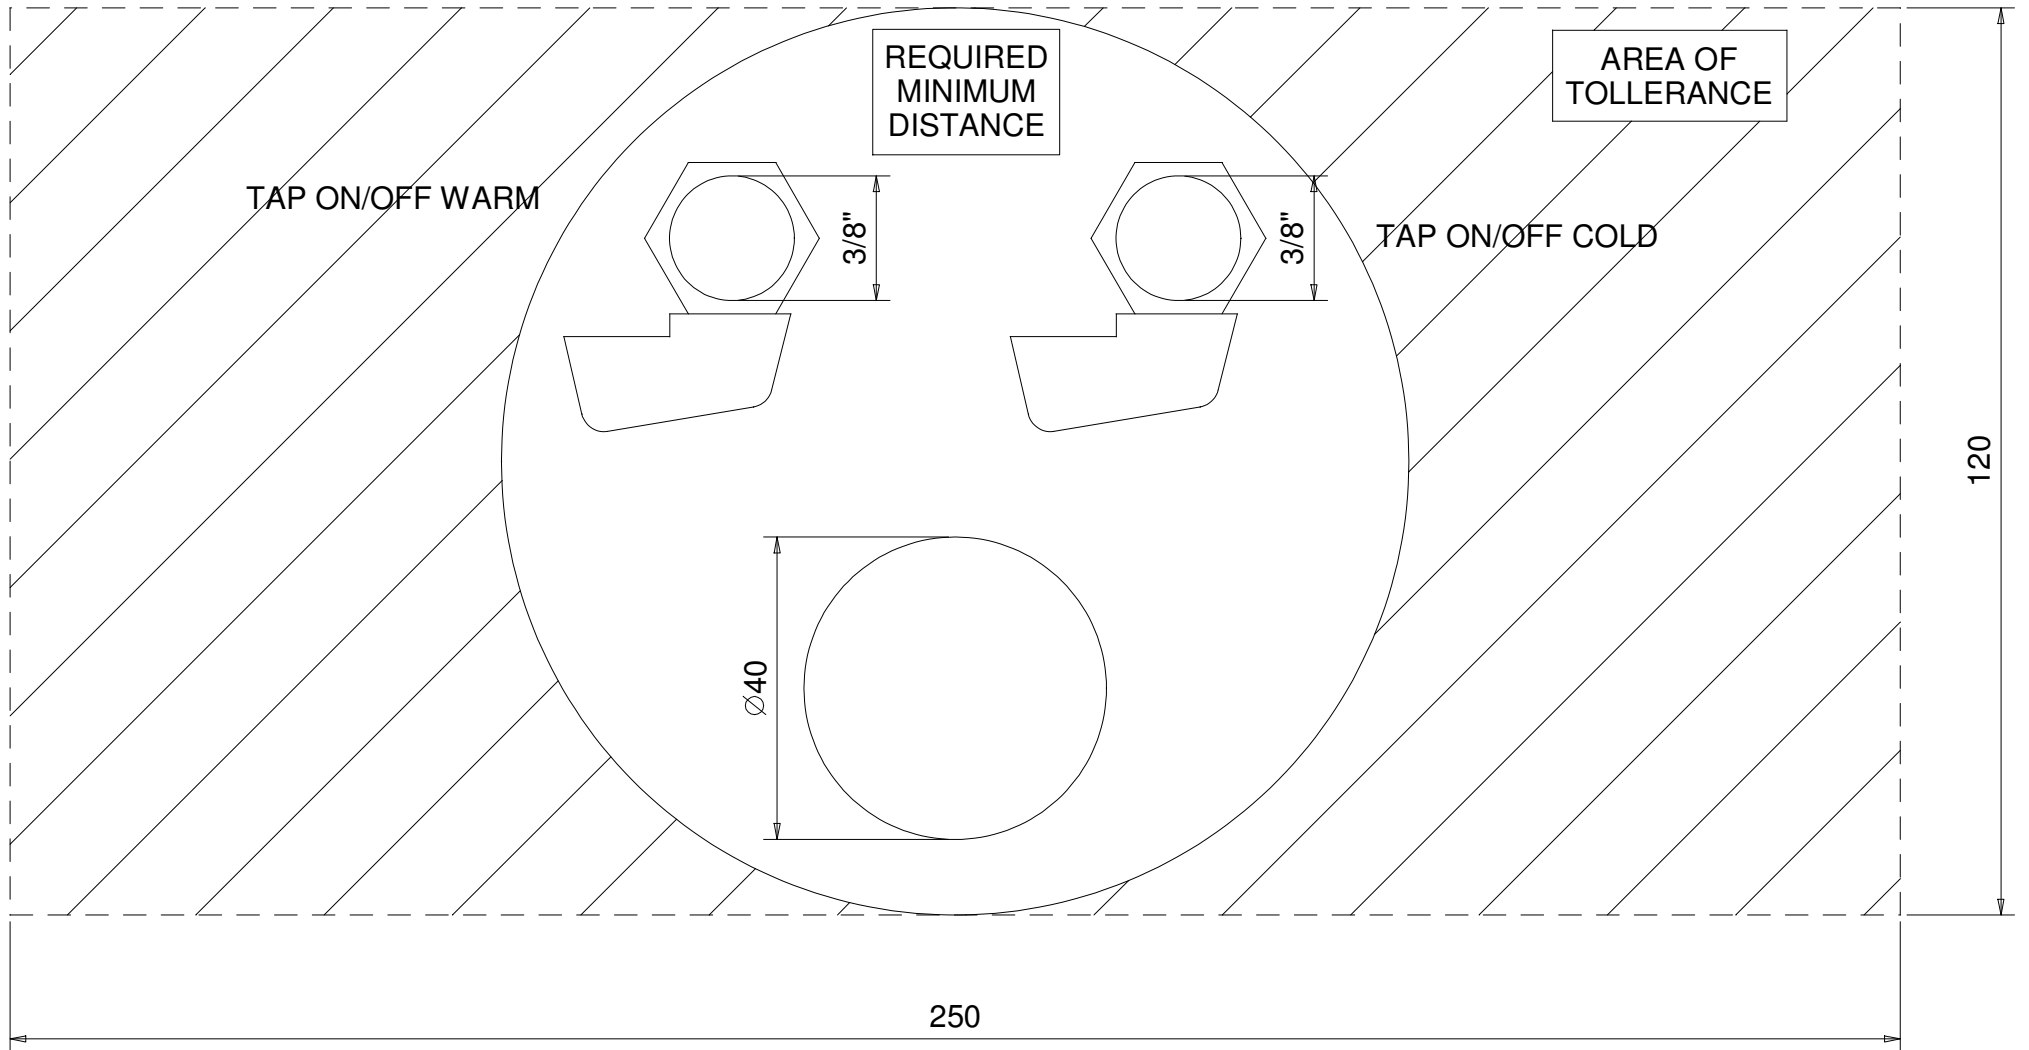

Salon Ambience

MADE IN ITALY



LUXURY

WU/128 - WU/138



Align the shampoo units

Allineare i lavaggi

A



Remove the plastic tray and rear door of the second shampoo unit


Smontare gli sportelli e il vassoio del 2° lavaggio



B

Remove the four seat screws

Rimuovere le quattro viti di tenuta seduta

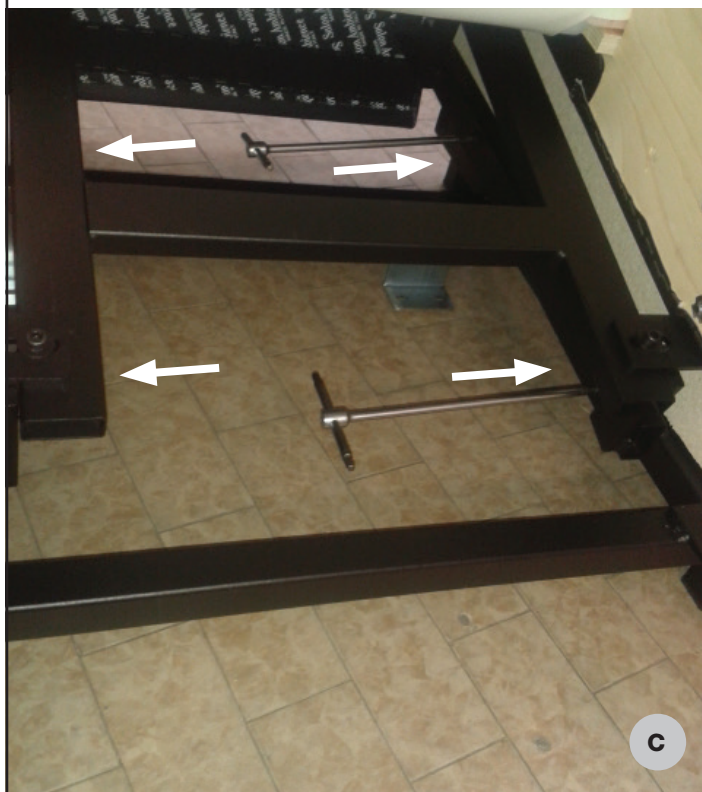

Remove the seat

Rimuovere la seduta




Remove the 7 seat screws

Rimuovere le 7 viti di tenuta seduta




Align and fix the structure to the central armrest

Affiancare e fissare la struttura al bracciolo centrale

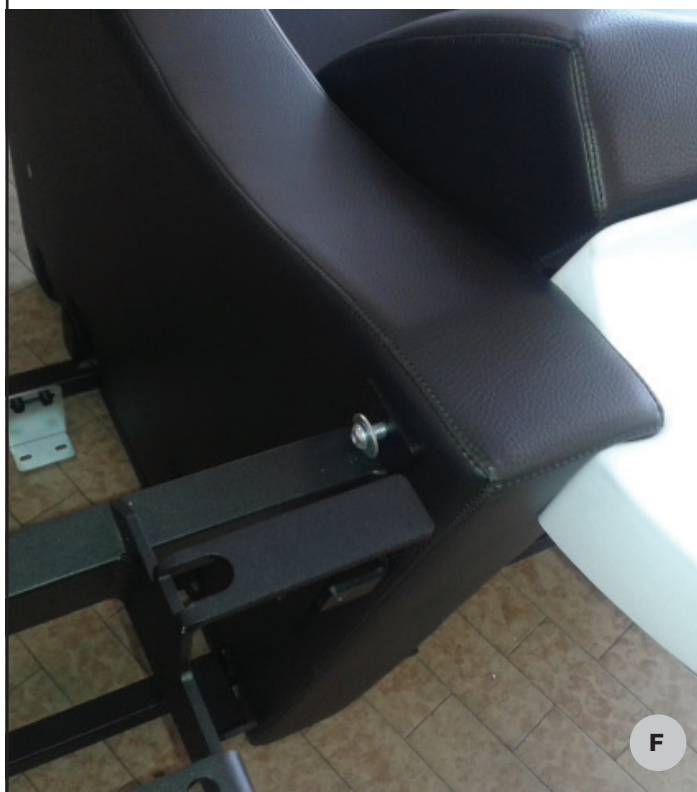

Replace the plastic tray

Rimontare il vassoio in plastica

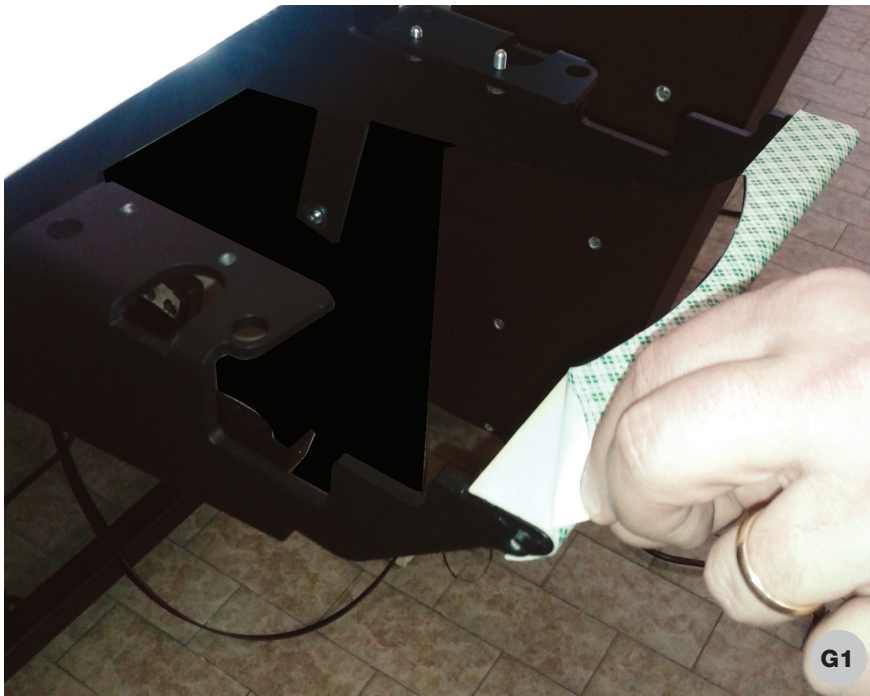

Salon Ambience

MADE IN ITALY 



www.salonambience.com



[salonambiencegroup](https://www.facebook.com/salonambiencegroup)

Salon Ambience

MADE IN ITALY



LUXURY



Align the shampoo units with the middle armrests in position

Allineare i lavaggi con i braccioli centrali in posizione

A




Remove the plastic tray and rear door

Smontare le parti in plastica vassoio e sportello posteriore

B

Connect the control panel and raise the footrest


Collegare la pulsantiera e alzare la pedana poggiatesta

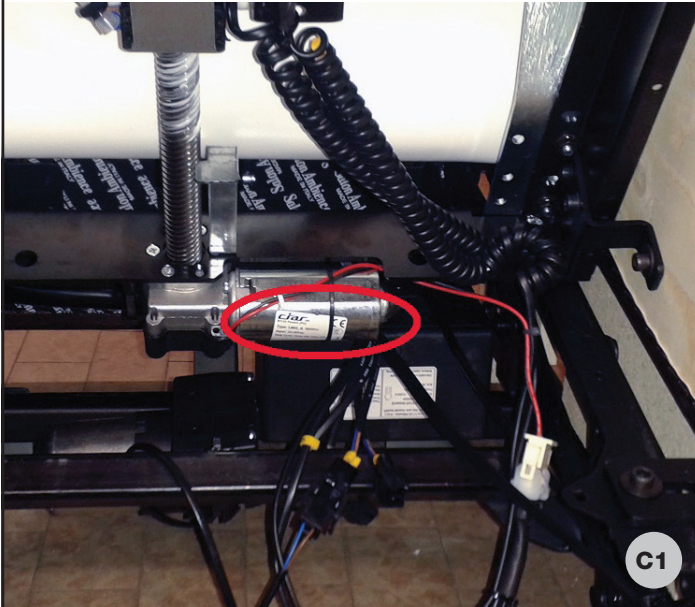

C1

Leave the footrest raised and disconnect the control panel


Lasciare la pedana poggiatesta alzata e scollegare la pulsantiera

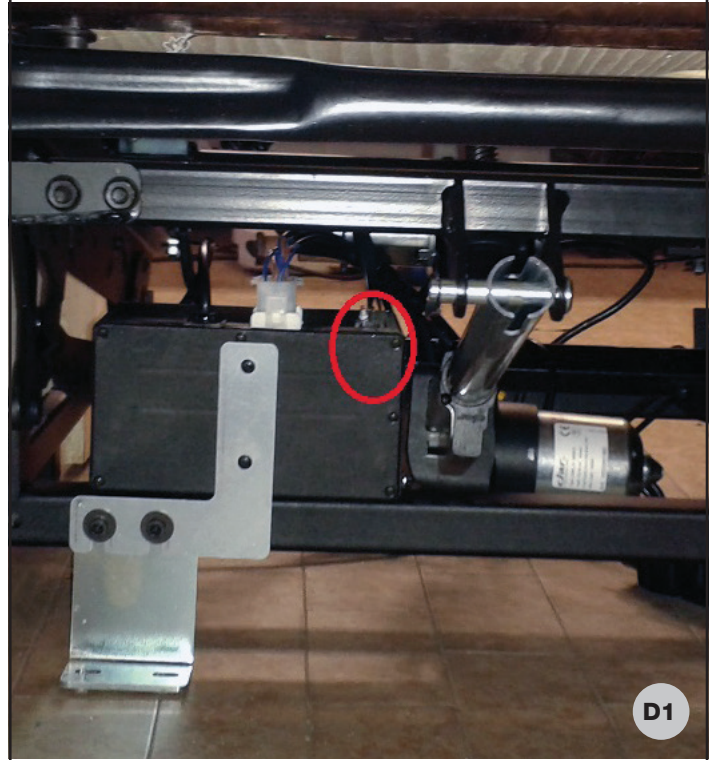


D1



C2

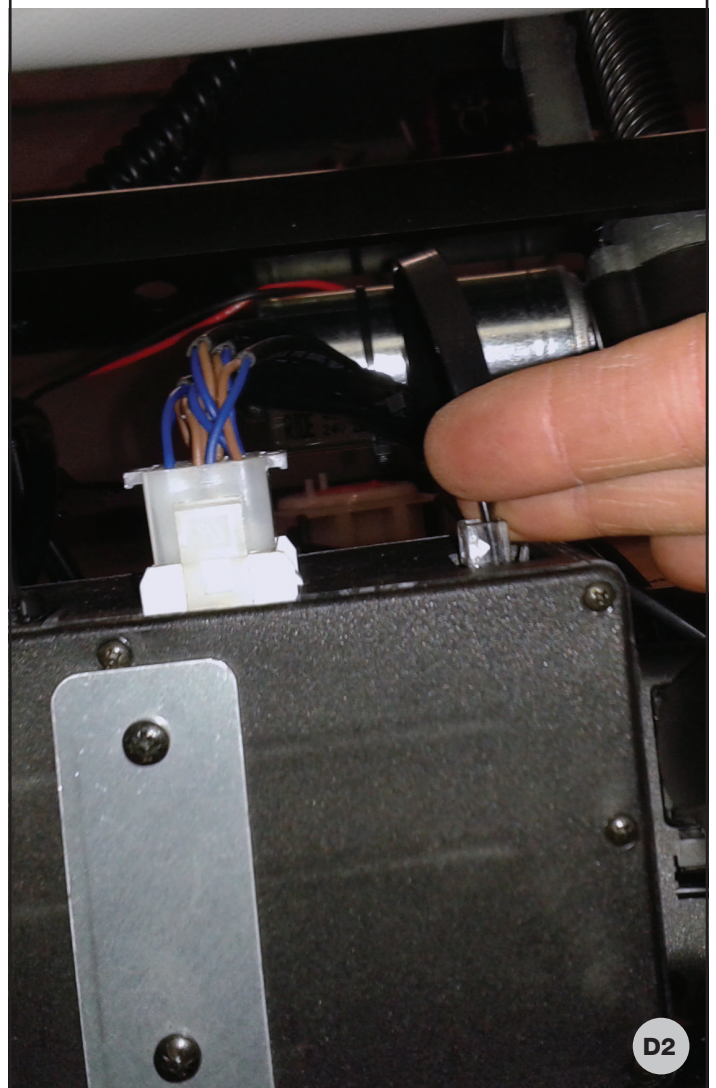

D2

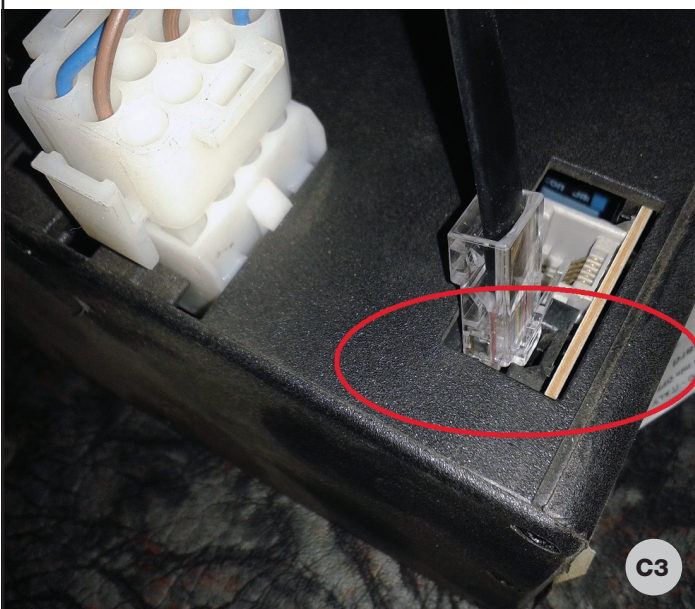

C3


Remove the temporary wood "armrests" (one side at a time) and replace them with the upholstered double armrest

Smontare i "finti" braccioli in legno (un lato alla volta) e sostituirli con il bracciolo doppio tappezzato



Reconnect the control panel

Ricollegare la pulsantiera

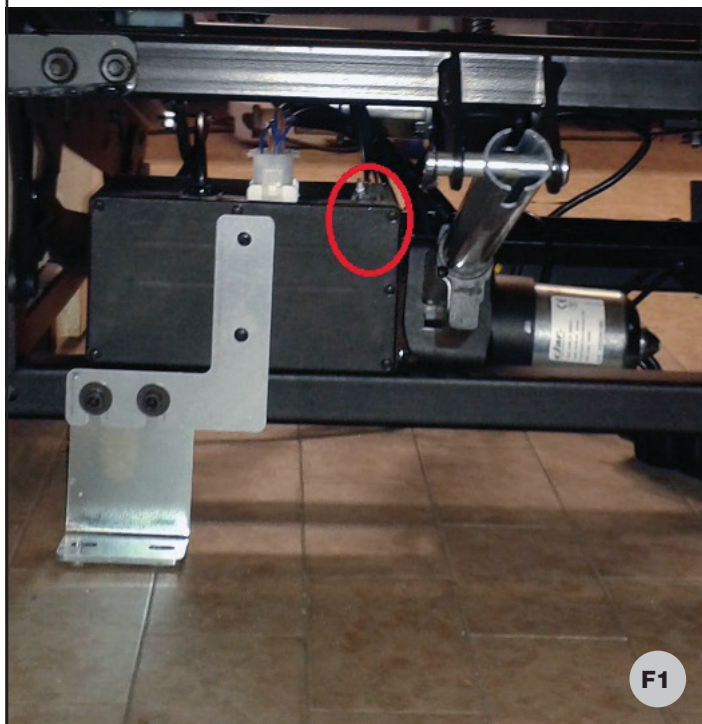


F1

Replace the plastic tray

Rimontare il vassoio in plastica



G1

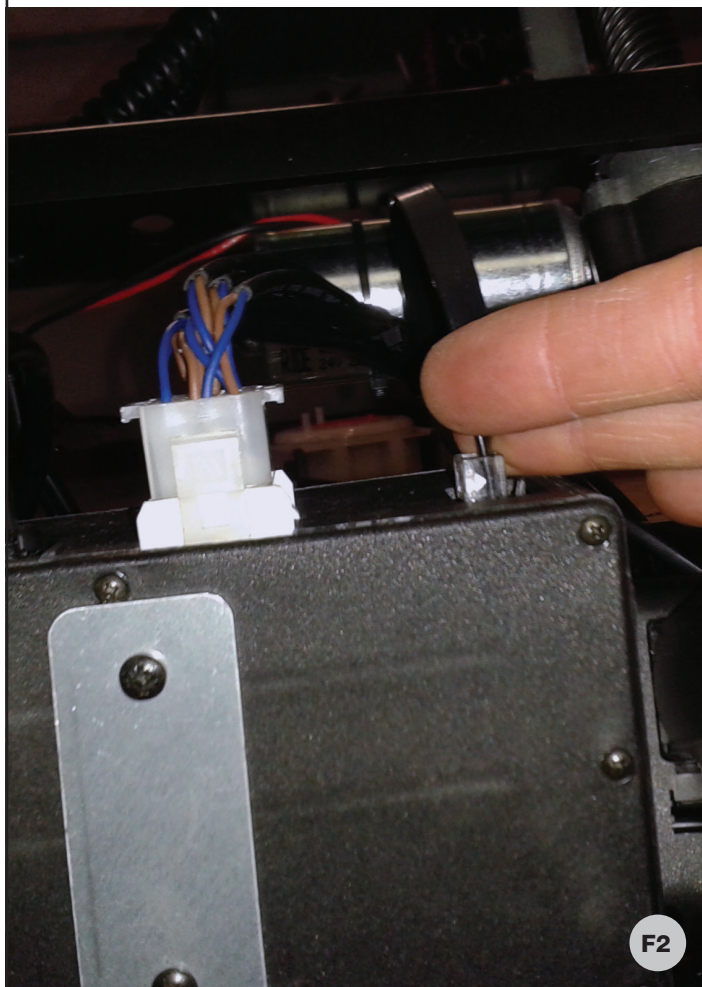

F2



G2



G3

Salon Ambience

MADE IN ITALY 


Command panel removal

Salon Ambience
100% MADE IN ITALY





Central power unit

Salon Ambience
100% MADE IN ITALY

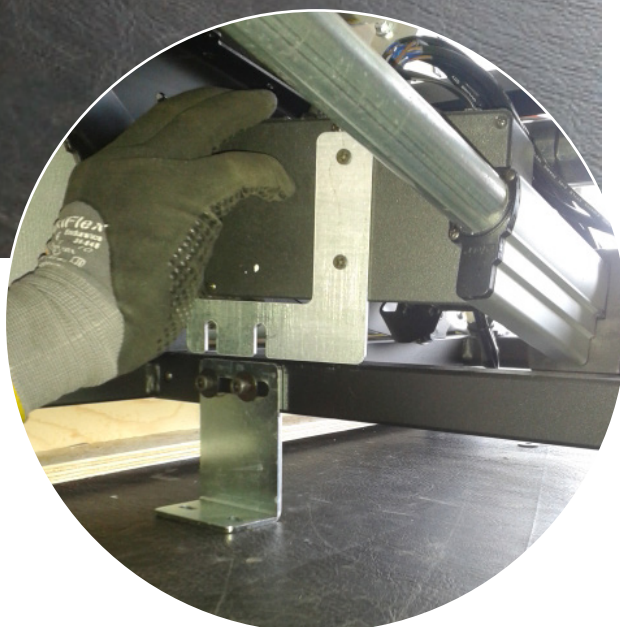



Replace Actuator

Salon Ambience
100% MADE IN ITALY

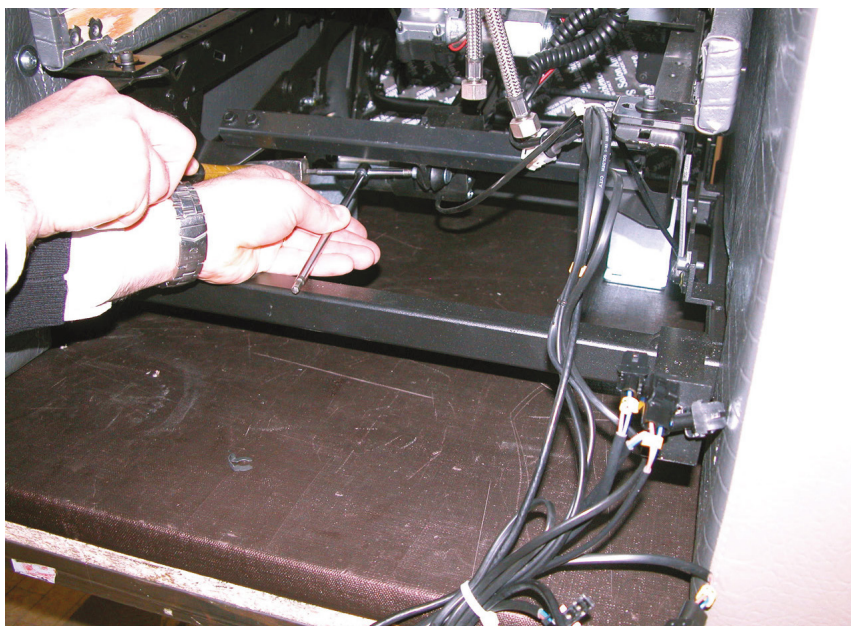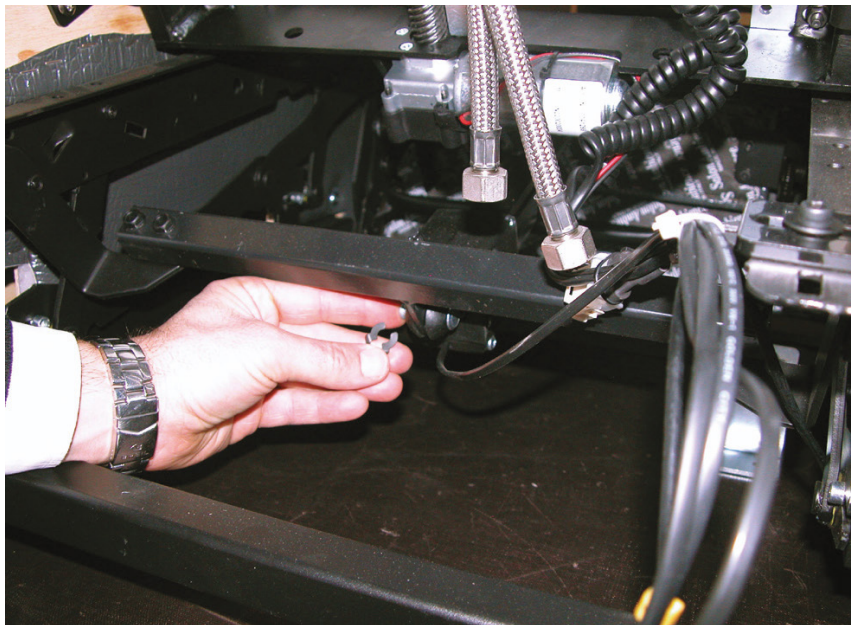

Complete removal of legrest mechanism in chair

Salon Ambience
100% MADE IN ITALY

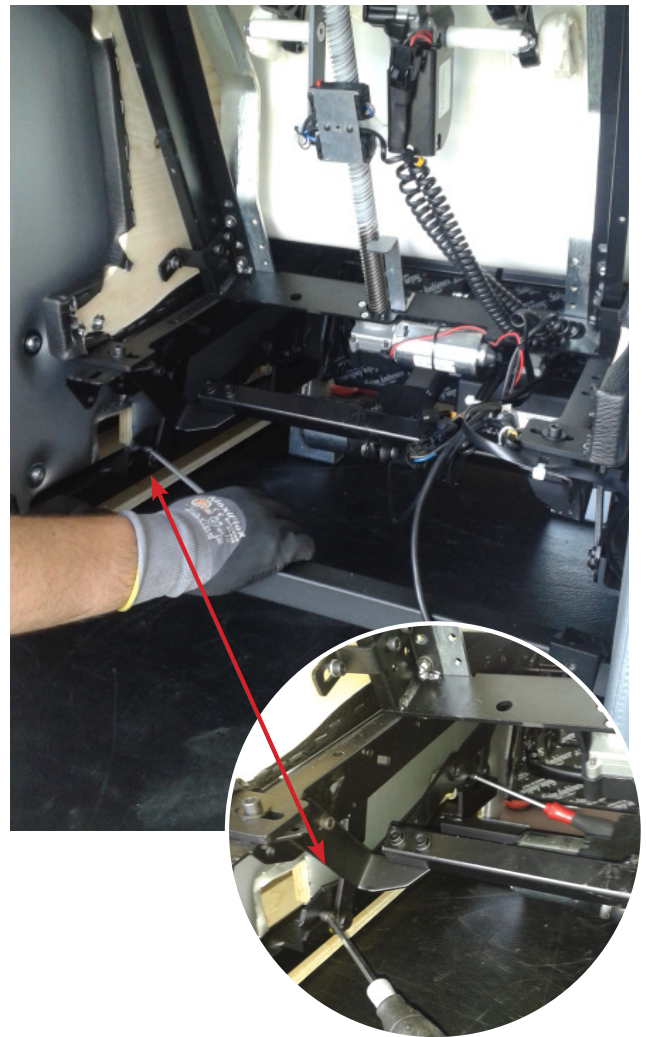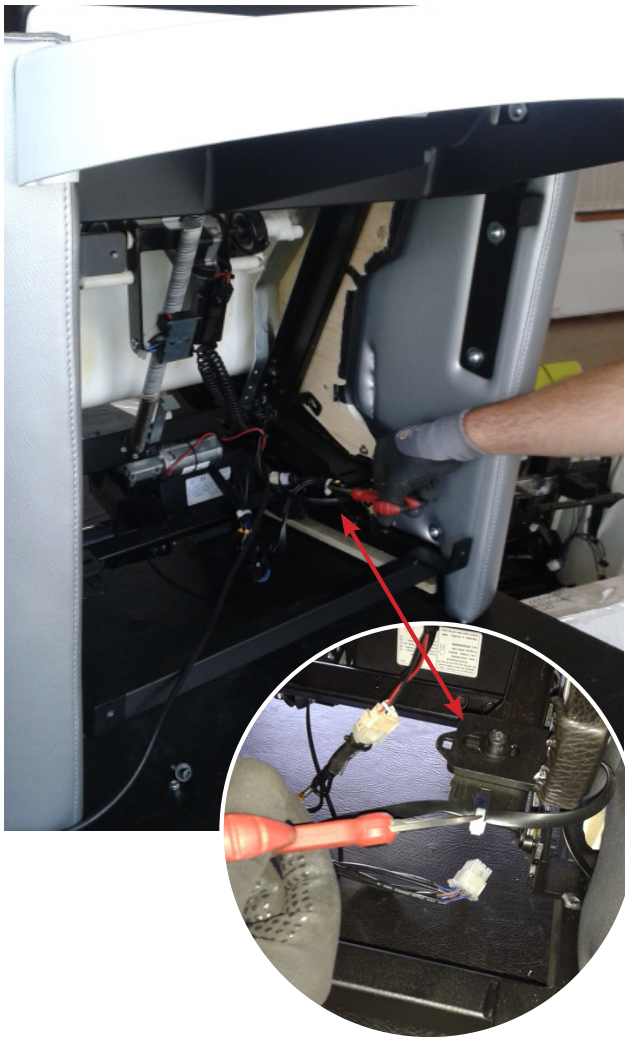

Massage trolley removal

Salon Ambience
100% MADE IN ITALY

